

• ASSEMBLING INSTRUCTIONS



CHEROKEE •GT

Select a level site clear of rocks, branches, and other hard or sharp objects, to install your tent.

1- Layout & positioning of tent and poles:


- Layout and position the tent with door facing desired direction (Fig 1);
- Insert the body poles into the pole sleeves.

2 - Connect poles to tent:

- Insert one pin into one end of the pole;
- Go to opposite end of pole and carefully insert the pin into the other pole end;
- Repeat for all poles;
- Attach clips "Quick up" along the edges of tent to body poles (Fig 2);
- Make any adjustments to the tent stakes, if needed.

3 - Attach rainfly:

- Attach top ridge pole to underside of rainfly with straps and insert the tips of the ridge (Fig 3) pole into the pockets on underside of rainfly;
- Drape rainfly over tent;
- Connect the elastic loops with 'S' hooks, (found at the rainfly corners) to the rings found at the tent corners;
- Secure rainfly with straps located on the underside of rainfly;
- Attach and stake out elastic cord at ground vent and guylines. (Fig 4)

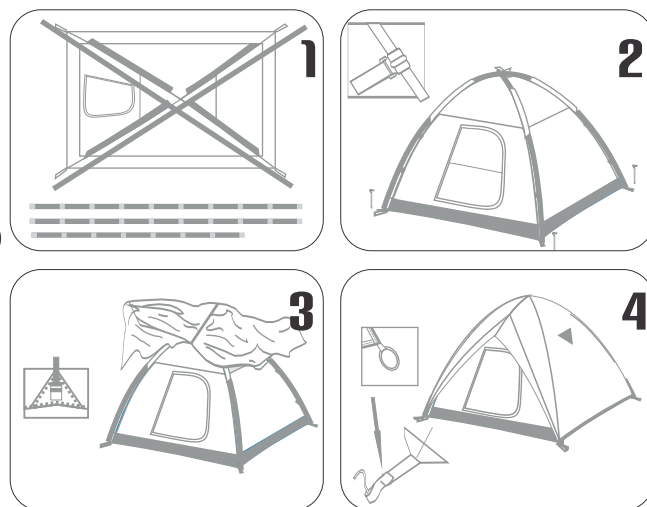

HINT: During setup, keep door zipped to keep proper tension on tent.

DISASSEMBLE OF YOUR TENT

• This process of the tent is the reverse of the preceding instructions and special care should be taken in removing the pegs (NEVER PULL ON THE TENT TO REMOVE STAKES AS THIS COULD RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY, use a peg remover or other peg) and make sure that the pegs and tent materials are dry and clean before packing away. A wet tent will mildew quickly and will void your warranty.

!WARNINGS!

1. Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and providing good ventilation through the tent.
2. Tree limbs, tree sap, bird droppings, or moisture steadily dripping of tree limbs can cause damage to the tent fabric and its coating resulting in leaks or loss of flame-resistant properties.
3. Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use separated storage bag.
4. Stakes should be removed by pulling on the stake itself. NEVER PULL ON THE TENT TO REMOVE STAKES AS THIS COULD RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY.
5. Tent poles should not be left telescoped together during storage.
6. Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

Our tents are made with such care and dedication using the latest available technology and most experienced labor. How much it will last does not depend only on our care but mainly on how YOU care about your tent. READ carefully the instructions and warnings and set up the tent at home before going outdoors to make sure all parts are in place and that you are familiar with it. The warranty is limited to 6 months after the date of purchase and covers material and workmanship defects only.

RESPECT AND PROTECT NATURE



40 years building a lifestyle
40 anos construindo um estilo de vida

WWW.NAUTIKALAZER.COM.BR

Todos os direitos reservados. Importa & Distribui para o Brasil:
NAUTIKA Com de Artigos de Lazer Ltda
CNPJ 08.712.193/0001-15
Tel 11-2085-4622 - sac@nautika.com.br

WWW.NTKGLOBAL.COM

All rights reserved
Todos los derechos reservados
International Recreational Products LLC Global
Customer Service 305-592-9472 - cs@ntkglobal.com